 


Ultra CatchéR 4

 
WHAT'S INSIDE

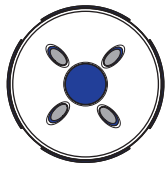

Ultra Catcher 4



Lanyard





Simple instructions

GETTING STARTED

Remove the battery cover from the back of the main unit and insert two AAA batteries. When the batteries are installed, the four buttons will light up in green.

Each LED button represents an individual account, allowing you to turn off unused accounts to save power. Press the LED button 3 times to turn off the account. When the account is powered off, the button will light up red and will no longer respond.

  *It is recommended to turn off the power frequently when not in use to prevent the battery from draining.

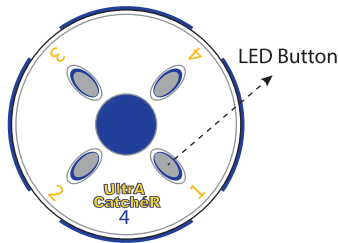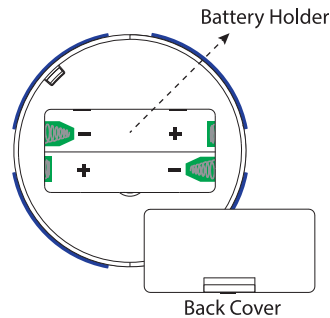

STATUS INDICATION

When the power is turned on, the status light will come on once every 10 seconds for 3 minutes.

	Green Flashing	Connectable
	Purple Flashing	Connected
	Red Flashing	Batteries are low




When the battery power is low, the red light will blink continuously once every 10 seconds. If the happens, replace the batteries immediately.

LED INDICATION

	Found a PokeStop
	Found a Pokemon
	Found an unknown Pokemon
	Capturing Pokemon
	Item bag is full
	Successfully caught a Pokemon
	Successfully spun a PokeStop
	Pokemon fled
	Out of Poke Balls
	Pokemon storage is full
	Phone network disconnected
	Failed to spin PokeStop

CONNECTION METHOD

   
- Turn on your mobile Bluetooth.
- Tap the Main Menu
- Tap [Settings]
- Tap [Connected Devices and Services]

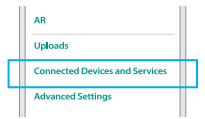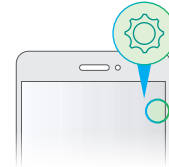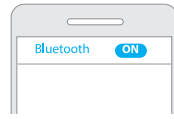


- Tap [Accessory Devices]



 - When the Ultra Catcher 4 is turned on, four devices will appear on the screen. When you press any LED button on the Ultra Catcher 4, the "Pokemon GO Plus" icon will light up. Select the "Pokemon GO Plus" you want to pair from the screen and tap it.

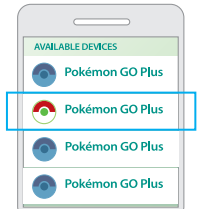


 - After successful connection establishment, the LED button on Ultra Catcher 4 will flash purple, indicating activation of the Pokémon GO Plus icon on the screen.

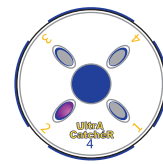

How to connect after completing the connection settings

 Launch "Pokemon GO" and tap the icon in the upper right corner of the screen. When the icon becomes bright, the connection is successful.

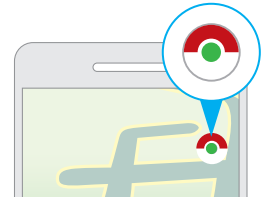

If the connection fails, access your phone's Bluetooth settings, select "Forget device" for "Pokemon GO Plus", and then proceed to restart the initial connection method.

NTOES

- After operating for 3 minutes, it enters power-saving mode. Functionality continues, but lights are not displayed.
- Due to game settings, it automatically disconnects every hour. You need to reconnect in the game.
- This product is not waterproof or dustproof.
- Please note that the app has a limited movement speed and will not capture or collect anything while moving at speeds above 24 km/h.
- Device requires Bluetooth low-energy compatible smartphone with Pokémon Go app installed. Compatible with iPhone 6S or higher devices with iOS Ver. 12 or higher version installed. Compatible with Android devices with 4 GB RAM or more. Bluetooth Smart (Bluetooth Ver. 4.0 or higher) capability and Android Ver. 7.0 or higher version installed.
- This Product is not sponsored, endorsed, or approved by Nintendo, The Pokémon Company or Niantic.
- Storage temperature: -5°C to 30°C ; Environmental temperature : 0°C ~ 35°C (32°F ~ 95°F)

P/N : Ultra Catcher 4
M/N : ZPP006G



FCC STATEMENT :
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



www.gamerznationtech.com



Official Website



Facebook



Instagram



International Official